

## Quick Start Guide

Wireless 7-day programmable room thermostat - 340022

### Installer



Please read the following points before installation as this will help you to prevent the most common reasons for loss of signal and product failure.



The thermostat and receiver are already paired together. If you have un-paired them by accident, please see page 4 in the installation guide.



The thermostat and the receiver must be at least **30cm from any metal or electrics**, including the boiler casing. Mounting multiple receiver units alongside each other can cause wireless saturation.



The building's structure may influence the performance of wireless products e.g. **foil backed plasterboard, thick stone walls, etc.**



Keep the thermostat at least 1m away from any object that could create interference e.g. **microwave ovens, wireless hubs, smart meters, cordless phone bases, etc.**



The Center programmable thermostat has a default schedule. **Help the end user to program their schedule after installation and save call backs later.**



**What do the lights on the receiver mean?**  
**Green light** - when the signal is good.  
**Red flashing light** - when the wireless signal is lost.

For further information please see page 3 of the installation guide.



Scan this QR code for more information or speak to one of our call center advisors on 0344 292 7062



Leave this Quick Start Guide with your customer

## Quick Start Guide

Wireless 7-day programmable room thermostat - 340022

### End User

CENTER

Your Center programmable thermostat will be most efficient when it's used in **automatic mode** not in manual mode.




A programmable thermostat allows you to create a schedule that reflects the heating requirements in your home. This will help you to reduce wasted heat and increase the systems efficiency.



There are no 'off' periods just time and temperature set points. The boiler will only call for heat if the room temperature drops below a set point.



You can program up to 4 different set points for each day of the week, to suit your needs. To find out how to programme your thermostat, please go to page 3 of the user guide.

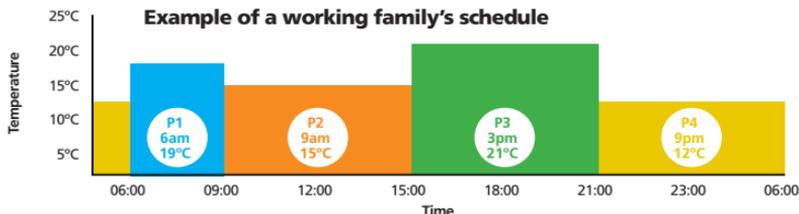

#### Setting

Set point 1. (P1)

Set point 2. (P2)

Set point 3. (P3)

Set point 4. (P4)

#### Selected temperature

6am - 19°C

9am - 15°C

3pm - 21°C

9pm - 12°C

#### Routine

Getting ready for work/kids ready for school

Comfort temperature

Children are home

Temperature reduced for bedtime



Scan this QR code for more information and to access the user & installation guide.



R32349361-001 A